


RAINWATER TANK EXCAVATION/INSTALATION INTRUCTIONS

**Underground 15,000L Rainwater Tank
Light Trafficable 2 Tonne Point Load Only
Tank + Lid Total Mass = 10.2 Tonnes**



Ph 3441 5200

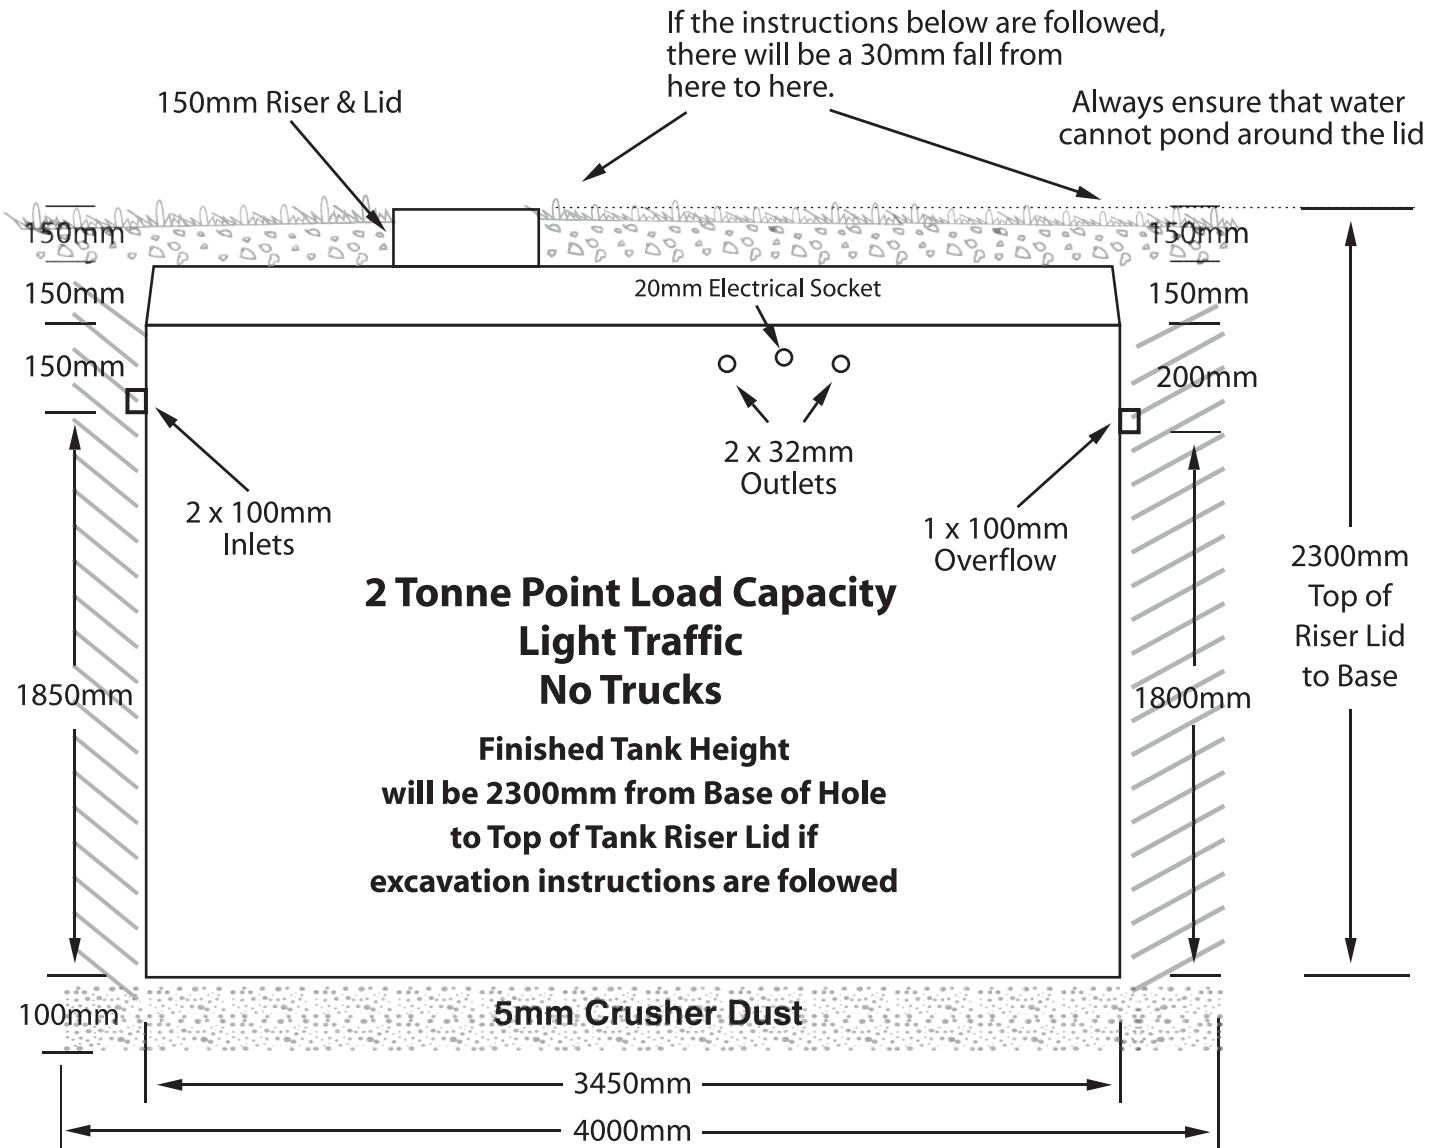

DO NOT USE SAND FOR BASE - WILL VOID WARRANTY

**Tanks must be installed perfectly level. Failure to do so will void warranty.
Do it once. Do it properly!**

EXCAVATION INSTRUCTIONS

1. Dig hole 4000m Square
2. Depth of Hole 2370mm (Then add 100mm Crusher Dust)
3. Cover Base of Hole with 100mm of 5mm Crusher Dust ensuring finished base is perfectly level
Do not have rocks in the base area. It will void warranty.
4. Back Fill with Sand/Soil NOT ROCKS
5. To prevent flotation, fill tank to at least 70% full. Failure to fill tank may cause your tank to float!
Taylex takes NO RESPONSIBILITY for floating tanks. If tank floats, it is up to the installer to rectify and pay for any costs that may be incurred.